

D E C  N G E L™

1101 GEL

APPLY, DRY, PEEL

APPLICATION MANUAL

A PRODUCT OF CBI POLYMERS



APPLY DECONGEL™

1. Apply tape near one end of the contaminated area (Optional)
2. Apply DeconGel™ to tape and over the contamination
3. Hold trowel at 90 degrees to the contaminated surface
4. Place trowel on tape and draw the gel over the contaminated area in one smooth motion. DeconGel™ can be applied with a paint brush, or foam brush depending on the surface.

DO NOT DILUTE DECONGEL™

DRYING TIME



Drying time depends on a combination of the ambient humidity, temperature, type of substrate and applied wet film thickness. This can take from as little time as an hour for thin coats in a dry environment with plenty of airflow, to overnight or longer if thicker coats are applied in humid environments. Dry times exceeding 24 hours may be required for good peel performance on bare concrete, wood and other highly porous substrates. Using fans, heat, and/or dehumidifier can speed up drying time.

It is recommended that first time customers test DeconGel™ on a small sample area to confirm the required film thickness and dry time for their specific application. DeconGel™ peels from most non-porous and porous hard surfaces if the dried film is thick enough. If the film is difficult to peel, add another coat, let dry, and peel.



DECONGEL™ PEELS EASILY ONCE IT HAS DRIED

When dry, peel up the tape along with the gel. The film containing the encapsulated contamination can be disposed of according to appropriate local, state and federal regulations.

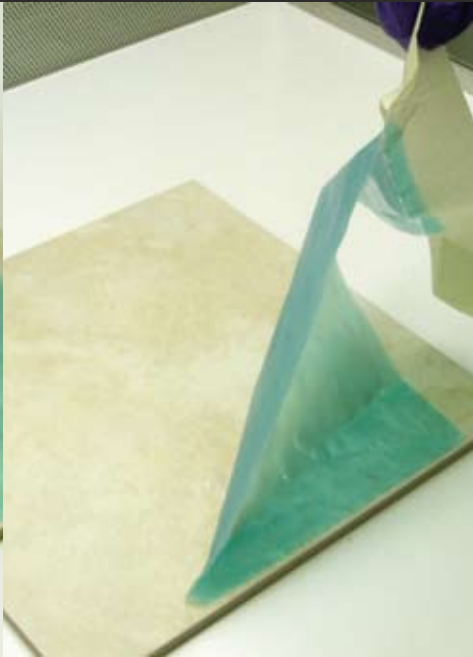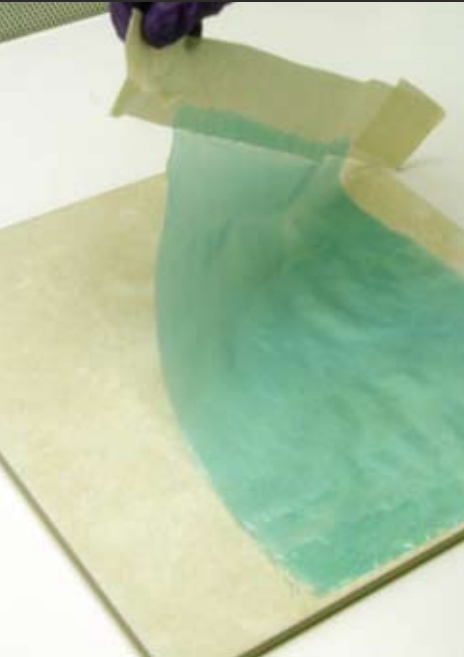

DeconGel™ effectively decontaminates a broad range of horizontal and vertical substrates including concrete, steel, painted or unpainted surfaces, glove boxes, hoods, casks, and many more...

DeconGel™'s extraordinary binding properties trap and encapsulate a wide spectrum of radioisotopes and chemicals in a simple, no-preparation process allowing easy and safe disposal.

For questions about DeconGel™, please contact:

ROBERTO MANDANAS

1-808-949-2208 ext 128

rmandanas@decongel.com

MICHAEL CHUN

1-808-949-2208 ext 146

mchun@decongel.com